

La -Z-Boy Task Advantage Chair Adjustment Instructions


Please note that all directions (left, right, clockwise and counter-clockwise) are from the seated position.

Arm Height:



Push in the small button on the inside of each arm and raise or lower the arm to the desired position.

Arm Width:

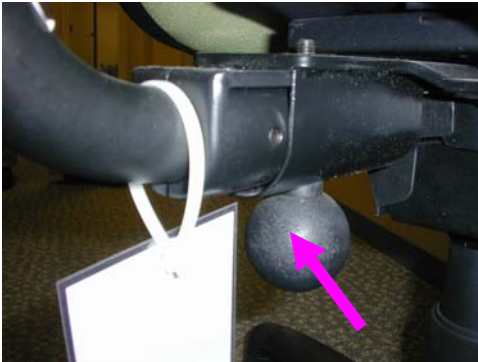

Rotate the knob underneath the arm clockwise to loosen. Move the arm in or out to the desired position. Rotate the knob counter-clockwise to lock in place.

Arm Pad Angle:



No knobs are needed to adjust the arm pad angle. Move the arm pad to the desired position.

Back Height:



No knobs or levers are needed to adjust the back height. The back is on a ratchet. Grasp the back with both hands and raise it into position. To lower, raise the back to highest position and drop. (The ratchet will release and the back will drop to the lowest level.)

Back Angle:




Raise the lever on the left side of the chair to unlock the back. Lean back in the chair and lower the lever to lock the back at desired angle. To release the angle, raise the lever to unlock and lean fully back in chair. This will release the angle and the chair will return to the upright position.

Back Tension:



The tension adjustment controls the amount of force needed to recline back in the chair. To loosen the tension, turn the knob located on the underside of the chair clockwise. To tighten the tension, turn the knob counter-clockwise.

Seat Height:

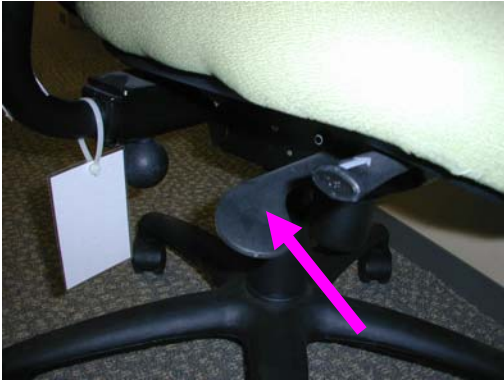

Raise the lever on the right side of the chair to raise and lower the seat height. Release the lever to lock the seat height.

Seat Depth:



Push in the lever on the right side of the chair and move the seat cushion forward or backward to the desired seat depth. Release the lever to lock the seat depth.